

ROTATION PLATE INSTALLATION

- 1) Remove the two screws from the accessorie and the screw and nut from the rotation plate.
- 2) Place the rotation plate between the accessorie and the rail bracket as shown.
- 3) Replace the two accessorie screws and tighten.
- 4) Replace the rotation plate screw and nut and adjust as necessary.

